

ANNUNCIOM

1000

Quick Install Guide

Version 2.0

IP Intercom, Public Address and Paging Device

Package contents

- a Annunicom 1000
- b Power supply
- c Screw block terminals (label stickers included)
- d Serial cable

Firmware

This device comes preloaded with standard firmware.
Alternative firmware can be downloaded from www.barix.com.

Support

For support please contact your local dealer or visit www.barix.com.

Front view



A Reset button

A brief press of the button will reset the device. Holding the reset button pressed in for approximately 10 seconds will reset the device and restore the factory default settings when the button is released.

B Green and red device status LEDs

C Green LEDs (1..8)

For Input/Output status display or custom usage

D Relay outputs 1..4 (50V , 1A)

Pin	Description
1,2	Relay 1 contacts (Normally Open)
3,4	Relay 2 contacts (Normally Open)
5,6	Relay 3 contacts (Normally Open)
7,8	Relay 4 contacts (Normally Open)

E Relay outputs 5..8 (50V , 1A)

Pin	Description
1-2	Relay 5 contacts (Normally Open)
3-4	Relay 6 contacts (Normally Open)
5-6	Relay 7 contacts (Normally Open)
7-8	Relay 8 contacts (Normally Open)

F Dry contact inputs 1..4 (supervised **)

Pin	Description	Pin	Description
1	Input 1	2	Ground 1 *
3	Input 2	4	Ground 2 *
5	Input 3	6	Ground 3 *
7	Input 4	8	Ground 4 *

G Dry contact inputs 5..8 ** / Fault relay


Pin	Description	Pin	Description
1	Input 5	2	Ground 5 & 6 *
3	Input 6	4	Input 7
5	Ground 7 & 8 *	6	Input 8
7-8	Fault Relay (Normally Closed)		

** Supervision requires two 10K resistors per input, one in series and one in parallel to the dry contacts.

H Audio output Left (balanced)

Pin	Description	Pin	Description
1	Audio - (cold)	2	Ground/Shield *
3	Audio + (hot)		

Rear view

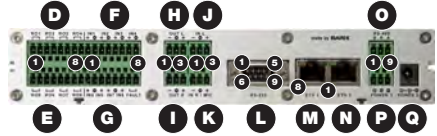

I Audio output Right (balanced)

Pin	Description	Pin	Description
1	Audio - (cold)	2	Ground/Shield *
3	Audio + (hot)		

J Audio input Left (balanced)

Pin	Description	Pin	Description
1	Audio - (cold)	2	Ground/Shield *
3	Audio + (hot)		

K Audio input Right/Microphone (balanced)

Pin	Description	Pin	Description
1	Aud./Mic - (cold)	2	Ground/Shield *
3	Aud./Mic + (hot)		

L RS-232 serial port (DSUB 9 pin male)

Pin	Description	Pin	Description
1,6,9	Not connected	2	Receive Data
3	Transmit Data	4	V+ 14.6VDC
5	Ground *	7	Ready to Send
8	Clear to Send		

M,N LAN ports 1 & 2 (RJ45 socket)

Pin	Description	Pin	Description
1	Transmit Data +	2	Transmit Data -
3	Receive Data +	4,5,7,8	Not connected
6	Receive Data -		

Green LED for Link, yellow LED for Activity

O RS-485 serial port

Pin	Description	Pin	Description
1	B signal	2	100Ω to GND
3	A signal		

P Power input (8 Watt max.)

Pin	Description	Pin	Description
1	+ 24..48 VDC	2,3	- / Ground *

Q Power input (independent from P, 8Watt max.)

Pin	Description	Pin	Description
center	+ 24..48 VDC	ring	- / Ground *

* Ground pins are connected to the negative power terminals (P: Pin 2+3 / Q: ring!)

1 Installation

STEP 1

Plug a standard (straight) network cable (not included) into the network port (M) of the Annunicom and the other end into your hub or switch. You can also use a crossover network cable (not included) for a direct connection to your PC.

STEP 2

Connect at least the left output (H) to the amplifier or mixer input(s) and adjust the volume for speaker(s) or headphones.

STEP 3

Connect the Power supply (b) to the device (Q) and then to an appropriate electrical outlet.

STEP 4

- i) The Annunicom will now acquire an IP address and announce it over the speaker output (if no DHCP server is available this can take up to 5 minutes).
- ii) If you did not connect any audio outputs in step 2, either see the next page for the ARP command procedure, or use the "Barix Discovery Tool" Java application (download the latest version from www.barix.com) on your computer (Windows, Mac or Linux) and click the "Get" button to find out which IP address the device has obtained (see picture at the bottom of the page). Make sure that the Ethernet address (MAC) matches your device (see label on the bottom of the device).

Now that you know the IP address proceed to the next section "Network configuration by web browser".

If you were not able to obtain the device's current IP address with the previous steps see section "Troubleshooting".

2 Network configuration by web browser

Most Barix applications require no configuration but use DHCP to configure network settings dynamically. If you need to use static (fixed) network settings follow steps 1 to 3, otherwise continue from step 4.

STEP 1

Open your web browser.

STEP 2

Enter the IP address that was announced by the Annunicom and press Enter. Example: 192.168.0.12 Click on the Configuration button, then on Advances Settings/Network.

NETWORK SETTINGS

Use SonicIP Yes No

IP Address 0 . 0 . 0 . 0

Netmask 0 . 0 . 0 . 0

Gateway IP Address 0 . 0 . 0 . 0

Primary DNS 0 . 0 . 0 . 0

Alternative DNS 0 . 0 . 0 . 0

Syslog Address 0 . 0 . 0 . 0

DHCP Host Name

Web Server Port 80

STEP 3

In order to make the application work the following parameters must be set (check with your network administrator):

- static IP address (the default «0.0.0.0» sets automatic discovery: BootP, DHCP) and netmask
- If you your devices are connected via routers also:
 - Gateway IP address

Hit the «Apply» button to save all changes. The device will reboot with the configured IP address.

STEP 4

To complete the application setup, download the firmware documentation from www.barix.com. Download the product manual for additional information about the hardware installation, technical and mechanical details as well as instructions on updating or changing the loaded application firmware.

Set reply	Ethernet address	IP address	HW type	IPAM type	Product ID	FW version	DHCP name
	00-08-e1-02-5a-4d	192.168.11.170	Annunicom 100				
	00-08-e1-01-0a-02	192.168.2.19	Exstreamer 200				
	00-08-e1-02-d5-00	192.168.2.66	Instreamer				

Device selected:

Get Set Clear Web Browser

3 Setting temporary IP address using ARP command

This procedure will work only in a local network. After this procedure the temporary IP will be active only until restart/reboot. After a restart the procedure has to be repeated.

STEP 1

Either use a network cable to link the Annunicom and the PC directly, or connect the Annunicom to the PC via your network switch and power the device. Make sure that you have a valid static IP address configured on your PC (e.g. 192.168.0.2)

STEP 2

Windows : For a command window, click on «Start», click on «Run...», in the «Open» field type `cmd`, click on «OK». OSX / Linux : Open a terminal window.

STEP 3

Please proceed to step 4 if you linked the PC directly to the device in step 1. To ensure that you use a free IP address (not already used by another device in the network) please use the Ping command. To verify availability in this example we assume the PC to have the IP address «192.168.0.2» and want to check if «192.168.0.6» is free. Type `ping 192.168.0.6` and hit the «Enter» key. You should get no reply which gives you reasonable assertion that the «pinged» IP is available.

STEP 4

Look for the Annunicom's MAC address printed on a label on the bottom of the device (12 hex digits, separated by a hyphen every 2 digits). Type into the windows command window

```
arp -s 192.168.0.6 00-08-E1-00-B1-77
```

or on a OSX or Linux system type into the terminal

```
arp -s 192.168.0.6 00:08:E1:00:B1:77
```

and hit the «Enter» key (replace the digits according to your devices MAC address). You must have administrative rights to be able to do so (sudo on OSX / Linux).

STEP 5

Now we have to make the Annunicom listen to the IP address «192.168.0.6» using the Telnet command. To do so type into the command window `telnet 192.168.0.6 1` and hit the «Enter» key (the number «one» must be there for this command to work correctly !!!). The Annunicom will immediately refuse the connection on port 1, but will be available for browser access as long as the device stays powered.

STEP 6

To check if the Annunicom is responding you can use the ping command again. To do so type `ping 192.168.0.6` and hit the «Enter» key. If you do get a reply the IP address 192.168.0.6 can be used to access the Annunicom using a web browser. Please go back to section «2 Network configuration by web browser» to configure a static IP address. If you do get «request timed out» then please repeat step 5 carefully (you most likely mistyped the telnet command) or repeat the entire procedure. If the ARP method does not work for you, refer to the user manual for further methods.

4 Troubleshooting

- If the status LEDs (B) stay dark check the power cabling (installation step 3).
- Check if the green LINK LED (M) is lit, if it is not then check your network cabling (network port M).
- If you have doubts about the current device settings you can revert the device to its factory defaults by pressing the Reset button (A) until the red status LED (B) blinks rapidly (takes about 10 seconds). The device will reboot once the button is released.

For information about our products, manuals, technical documentation, latest firmware, support and access to the user forum please visit www.barix.com.

BARIX

Barix AG, Seefeldstrasse 303, CH-8008 Zürich

P +41 43 433 22 11

info@barix.com, www.barix.com
